


Manual Motor Starter with Accessories

Unit: in [mm]

Auxiliary Contact Side Mount Auxiliary Contact Side Mount & Fault Signal Contact Shunt Trip Release & Under Voltage Release

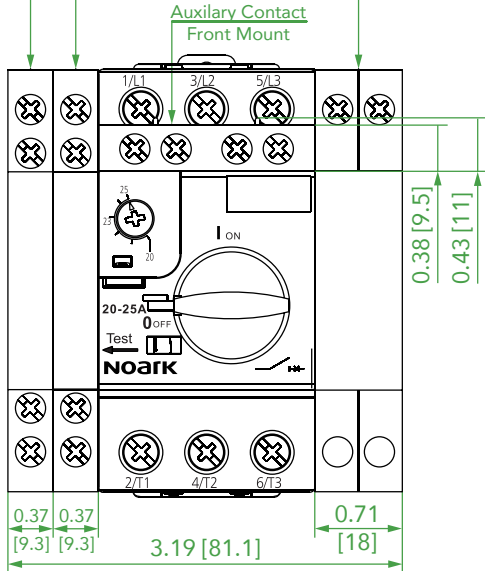

Auxiliary Contact Side Mount Auxiliary Contact Side Mount & Fault Signal Contact Shunt Trip Release & Under Voltage Release

