Installation Instructions
Notice d'installation
Instrucciones de montaje

NOARK

Ex9CK50/60/75/90 3 Pole
Definite-purpose Contactor

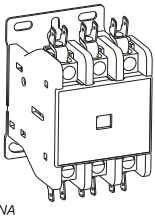

Z9CK3201208NA

WARNING

DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED.DEATH, SEVERE PERSONAL INJURY, OR SUBSTANTIAL PROPERTY DAMAGE CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT. ALWAYS VERIFY THAT NO VOLTAGE IS PRESENT BEFORE PROCEEDING WITH THE TASK, AND ALWAYS FOLLOW GENERALLY ACCEPTED SAFETY PROCEDURES.

NOARK IS NOT LIABLE FOR THE MISAPPLICATION OR MISSAPPLICATION OF IT'S PRODUCTS.

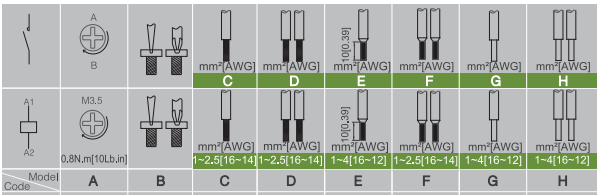

Model / Code	A	B	C	D	E	F	G	H
Ex9CK50	M8	10~14N.m [40Lb.in]	4~10 [12~8]	4~10 [12~8]	4~10 [12~8]	4~10 [12~8]	6~16 [10~6]	6~16 [10~6]
Ex9CK60	M8	10~14N.m [40Lb.in]	4~10 [12~8]	4~10 [12~8]	4~10 [12~8]	4~10 [12~8]	6~16 [10~6]	6~16 [10~6]
Ex9CK75	M10	10~14N.m [50Lb.in]	10~25 [8~4]	10~25 [8~4]	10~25 [8~4]	10~25 [8~4]	16~35 [6~3]	16~35 [6~3]
Ex9CK90	M10	10~14N.m [50Lb.in]	10~25 [8~4]	10~25 [8~4]	10~25 [8~4]	10~25 [8~4]	25~35 [4~3]	25~35 [4~3]

Warning!
Motor may start automatically. Automatic start may injure persons and damage machines. Automatic restart is possible when "automatic reset" is active.

Avertissement !
Le redémarrage automatique du moteur peut provoquer des dégâts matériels et étre dangereux pour personnes. Ce danger du redémarrage automatique correspond au mode «réarmement automatique».

¡Advertencia!
El motor puede arrancar automáticamente. El arranque automático es posible cuando el "botón de reset" está en posicion automatico y el circuito de maniobra activado.

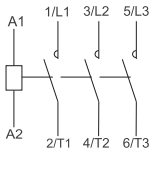

Disconnect all power before working on equipment.
Coupez toutes les alimentations avant de travailler sur l'équipement.
Desconecte la alimentación antes de trabajar en equipo.

NOARK

Printed with environment-friendly paper

Copyright Noark. All Rights Reserved

www.noark-electric.com
08/2012