UVT31U

1

Undervoltage Release

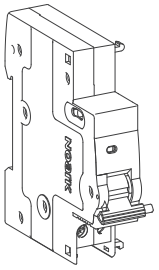

Installation Instructions

Notice d'installation

Instrucciones de montaje

NOARK

ZAX3111U201208NA

UVT31U

2

## WARNING

***DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED.DEATH, SEVERE PERSONAL INJURY, OR SUBSTANTIAL PROPERTY DAMAGE CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT. ALWAYS VERIFY THAT NO VOLTAGE IS PRESENT BEFORE PROCEEDING WITH THE TASK, AND ALWAYS FOLLOW GENERALLY ACCEPTED SAFETY PROCEDURES.***

***NOARK IS NOT LIABLE FOR THE MISAPPLICATION OR MISSINSTALLATION OF IT'S PRODUCTS.***

UVT31U

3

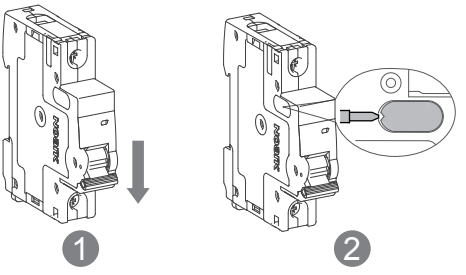


UVT31U

4

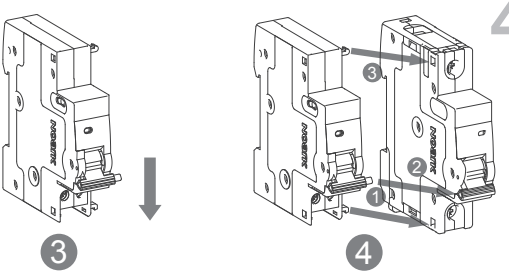


UVT31U

5

| | |
|---|---|
| | Z1 |
| | 18-14AWG (0.5-4mm²) |
| | 9lb.in(1.0Nm) |

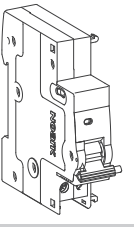

UVT31U

6

UVT31U

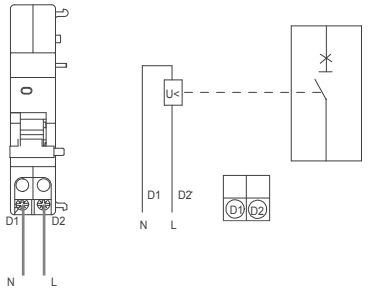

## UVT31U

7

UVT3101U(1NC)

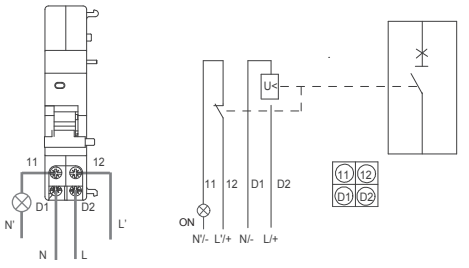


## UVT31U

8

UVT3110U(1NO)

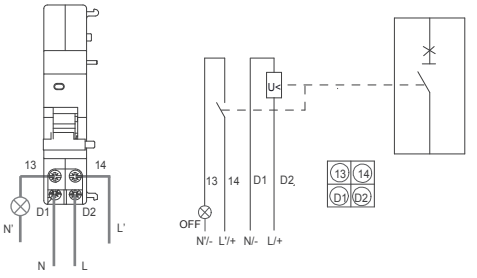


## UVT31U

9

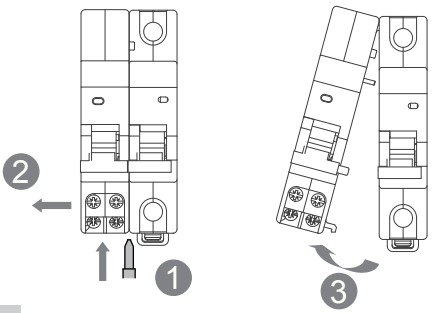


## UVT31U

10

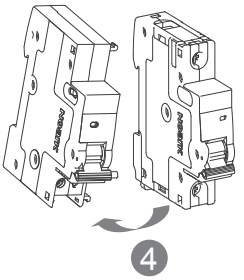


## UVT31U

11

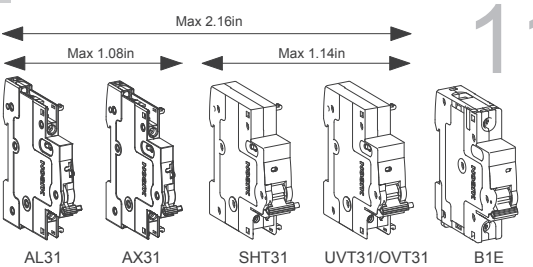


Noark

Printed with environment-friendly paper
Copyright Noark. All Rights Reserved
www.noark-electric.com
08/2012